



# MCP to DIMMING RELAY ENCLOSURE WIRING DETAIL

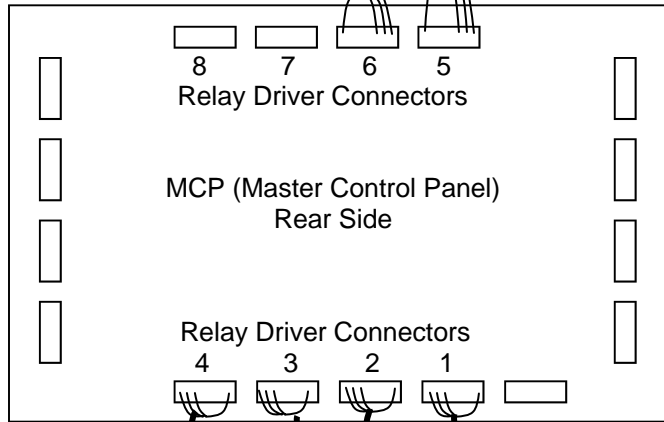


A Relay Driver Connector may be used for:  
Fan Speed Controller Board Chain  
OR one Low Voltage Relay Board  
OR one Relay Driver Board in an ERP Enclosure.

Any ERP Relay, Fan FSCB Output, or LVRB Relay's number in the Elegance Programming Software is determined by the Relay Driver Connector to which it is connected. (See MCP


ERP48

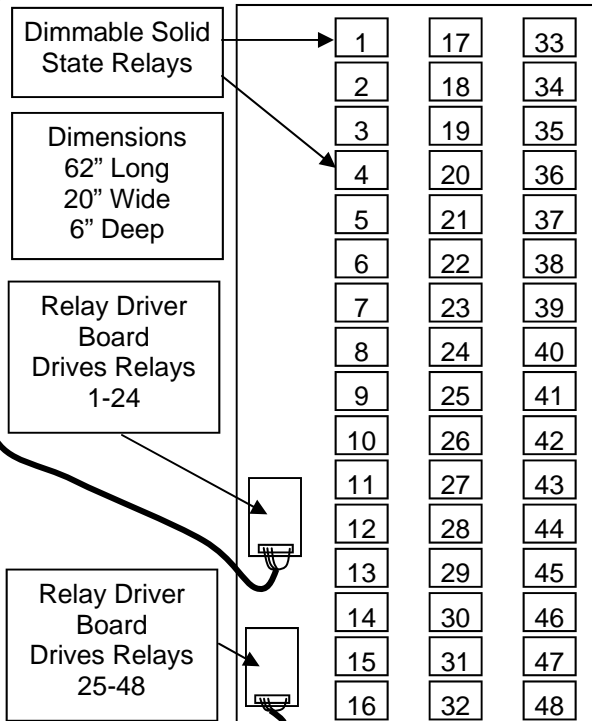

ERP36

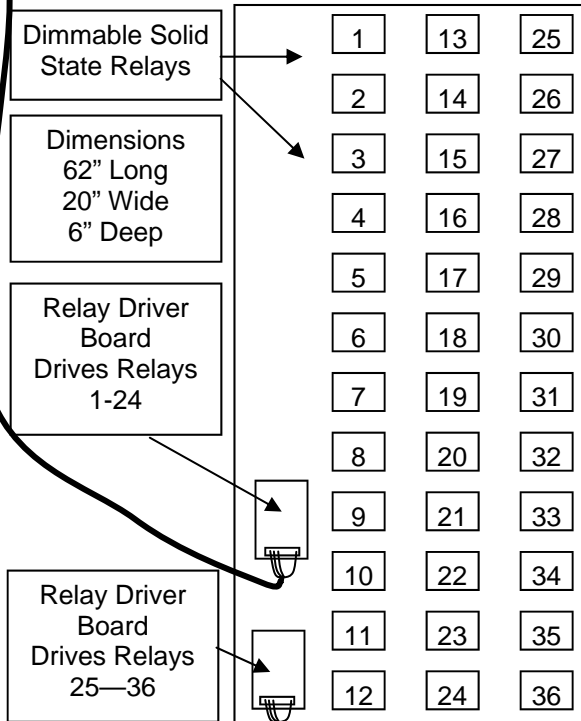

ERP12

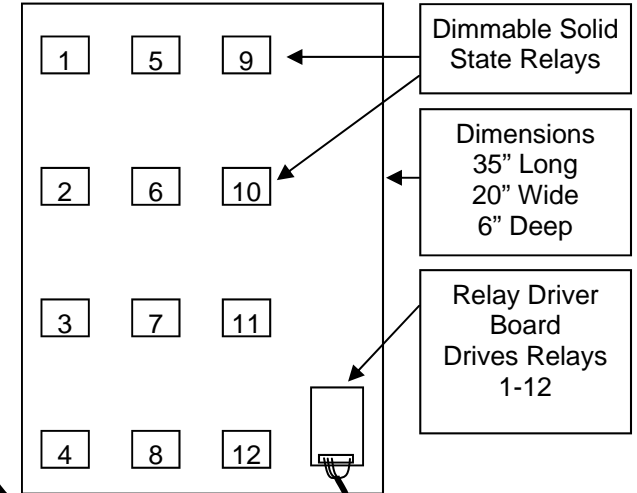

ERP24

