


# REMOTE CONTROL RECEIVER to STAR WIRING DETAIL

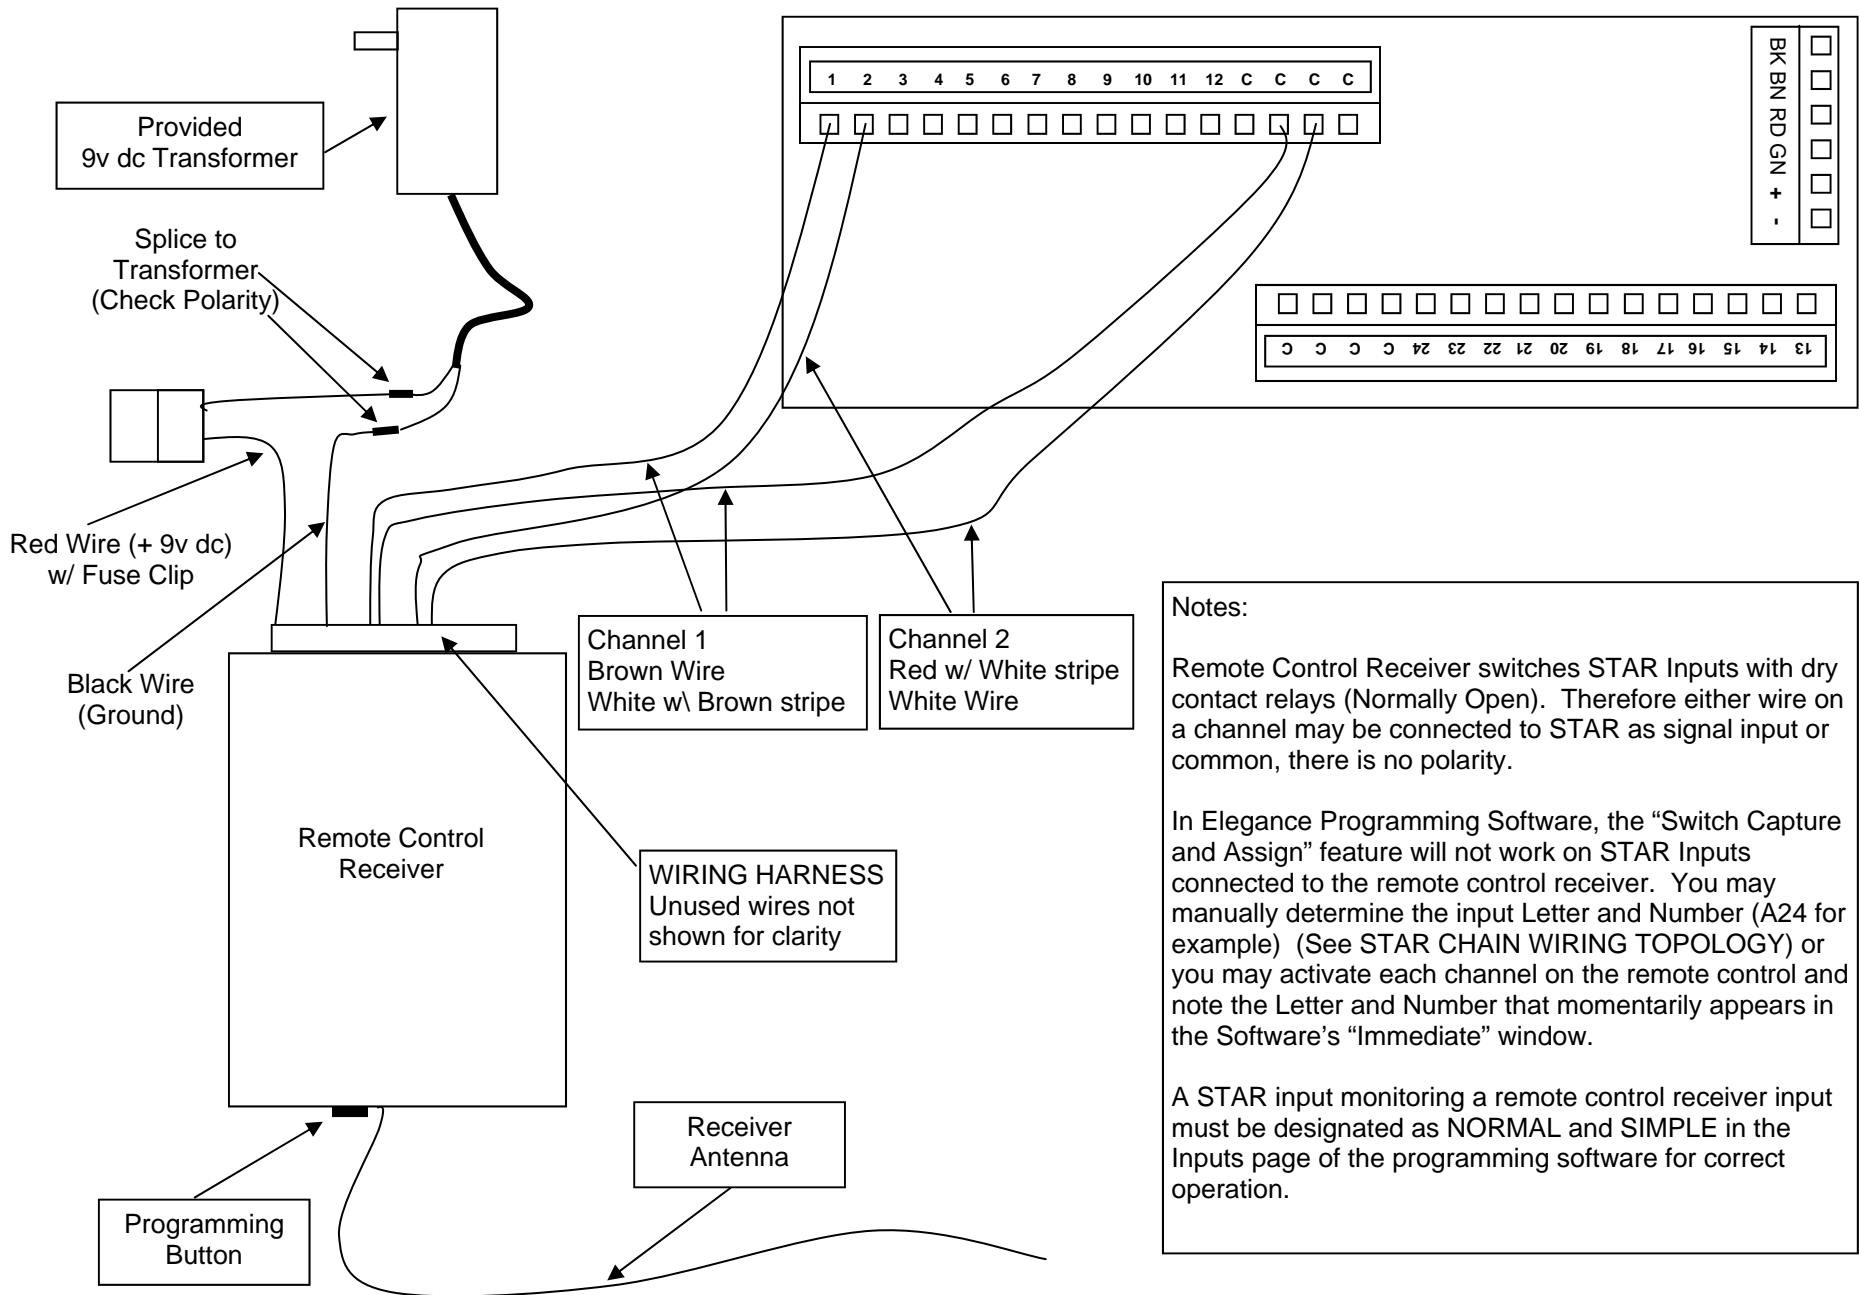

**Notes:**

Remote Control Receiver switches STAR Inputs with dry contact relays (Normally Open). Therefore either wire on a channel may be connected to STAR as signal input or common, there is no polarity.

In Elegance Programming Software, the "Switch Capture and Assign" feature will not work on STAR Inputs connected to the remote control receiver. You may manually determine the input Letter and Number (A24 for example) (See STAR CHAIN WIRING TOPOLOGY) or you may activate each channel on the remote control and note the Letter and Number that momentarily appears in the Software's "Immediate" window.

A STAR input monitoring a remote control receiver input must be designated as NORMAL and SIMPLE in the Inputs page of the programming software for correct operation.